SAMSUNG

Washing Machine
Owner's Instructions

M1201
M1001
M801
M601

Safety Precautions

Congratulations on your purchase of this Samsung washing machine. These Owner's Instructions contain valuable information on the installation, use, and care of this appliance. Please take the time to read these instructions so that you can take full advantage of the washing machine's features and enjoy this appliance for many years to come.

Before using the appliance

- Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.
- The appliance is designed for home use only.
- Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine" on page 2) and local safety regulations.
- All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See "Removing the shipping bolts" on page 3.
- Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time" on page 8.

Safety instructions

- Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet or set the ⏻(On / Off) button to Off.
- Make sure that the pockets of all clothing to be washed are empty.
  Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.
- Always unplug the appliance and turn off the water after use.
- Before you open the door of the appliance, check that the water has drained. Do not open the door if you can still see water.
- Pets and small children may climb into the appliance. Check the appliance before each use.
- The glass door becomes very hot during the washing cycle. Keep children away from the appliance while it is in use.
- Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and / or make more serious repairs to the appliance necessary.
- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
- This appliance should only be serviced by an authorized service center, and only genuine spare parts should be used.

● SAVE THESE INSTRUCTIONS

Safety Precautions

Installing the Wash
- Unpacking the washin
- Overview of the washi
- Selecting a location --
- Adjusting the leveling
- Removing the shippin
- Connecting the water
- Positioning the drain h
- Plugging in the machir

Washing a Load of
- Overview of the contro
- Washing for the first ti
- Putting detergent in th
- Operating Instruction
- When the cycle is finsi
- Washing tips and hints

Maintaining the Wa
- Draining the washing
- Repairing a frozen wa
- Cleaning the exterior
- Cleaning the detergen
- Cleaning the debris filt
- Cleaning the water ho

Troubleshooting --
- Problems and solution
- Understanding error m

Programme chart

Appendix ----------
- Fabric care chart -----
- Electrical warnings --
- Protecting the environ
- Declaration of conform
- Specification ----------

Unpacking the Washing Machine

Unpack your washing machine and inspect it for shipping damage. Also make sure that you have received all of the items shown below. If the washing machine was damaged during shipping or you do not have all of the items, contact your Samsung dealer immediately.

Overview of the washing machine

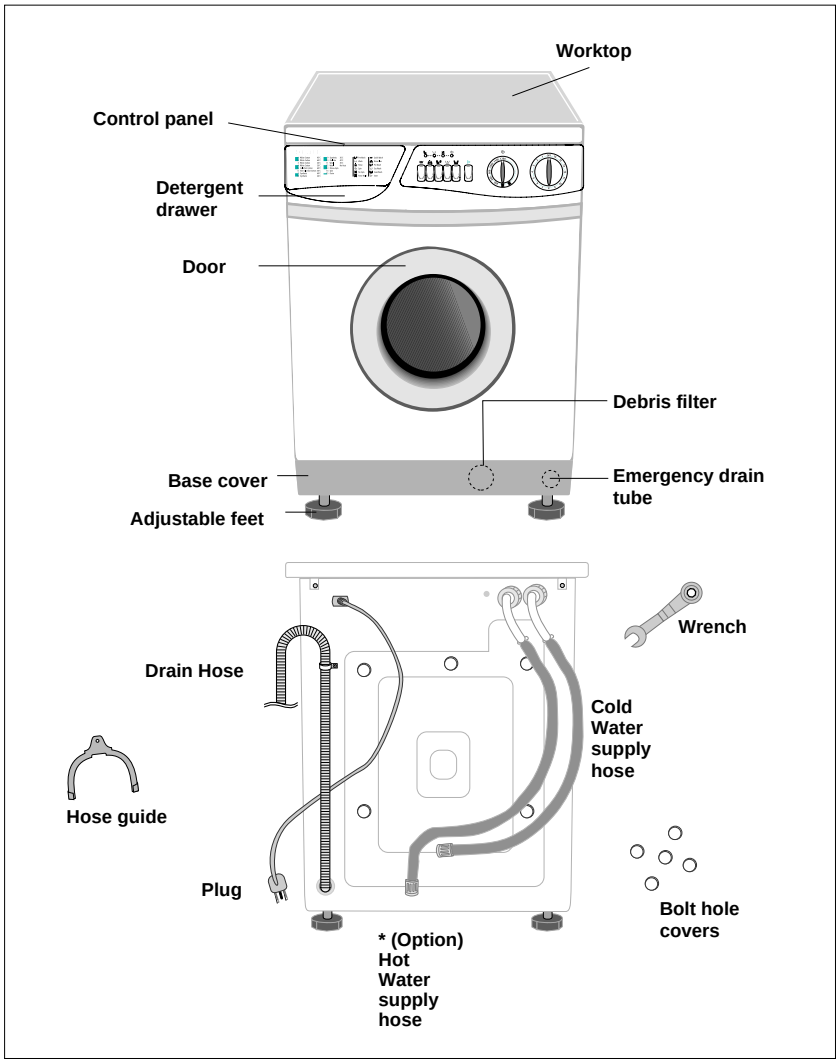

Selecting a locatio

Before you install the washing

- A hard, level surface (if t
- Away from direct sunlig
- Adequate ventilation
- Room temperature that
- Away from sources of h

Make sure that the washing m
Ventilation openings must n
installed on a carpeted floor.

Adjusting the level

If the floor is uneven, adjust th
the feet):

1. Loosen the leg bolt by tu
2. Tighten the locking nut b



- **Place the washer on a sturdy,**
  If the washer is placed on a
  (Only a l degrees angle is a

Removing the ship

Before using the washing ma
of the
u n i t .
T o

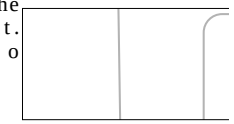

remove the bolts:

1. Remove the adaptor from the water supply hose.

head and pull it through the
part of the hole.
Repeat for each bolt.

3. Fill the holes with supplied plastic covers.
4. Keep the shipping bolt future use.

Connecting the w

Connecting the water supply hose

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short and you do not wish to move the water faucet, replace the hose with a longer, high pressure hose.

To connect the water supply hose:

1. Take the L-shaped arm fitting for the cold water supply hose and connect to the cold water supply intake on the back of the machine. Tighten by hand.

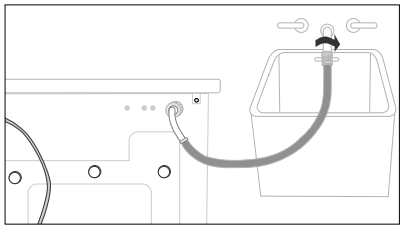

2. Connect the other end of the cold water supply hose to your sink's cold water faucet and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

Option:
1. **Take the red L-shaped arm fitting for the hot water supply hose and connect to the red hot water supply intake on the back of the machine. Tighten by hand.**
2. **Connect the other end of the hot water supply hose to your sink's hot water faucet and tighten it by hand.**
3. **Use a Y-piece if you only want to use cold water.**

Positioning the drain hose

The end of the drain hose may be positioned in three ways:

Over the edge of a sink

The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the faucet with a piece of string to prevent the drain hose from moving.

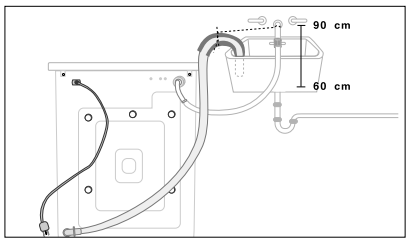

In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

In a drain pipe

Samsung recommends that you use a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

Plugging in the ma

For European Users. Yo

For U.S. Users. You **MU**

Check with a licensed electrici
grounded.

For U.K. Users.

Wiring Instructions

WARNING THIS APPLIANCE

This appliance must be earthe
electrical short circuit, earthing
shock providing an escape wi
The appliance is equipped wit
includes an earth wire for con
of your mains plug.
The plug must be plugged int
installed and earthed.

*The wires in this mains lead a
with the following code:
- Green and yellow
- Blue
- Brown

- AS the colours of the wires i
appliance may not correspo
markings indentifying the t
proceed as follows.
- Connect the green and yello
in the plug marked with the
symbol (⏚) or coloured g
yellow.
- Connect the blue wire to the
with the letter N or coloured
- Connect the brown wire to t
with the letter L or coloured

* Consult a qualified electrici
if in doubt about any of the
The manufacturer of this w
not accept any liability for d
material for non observance
There are no user serviceab
washing machine and if the
appliance is damaged, it mu
qualified service personnel
manufacturer because spec

Overview of the control panel

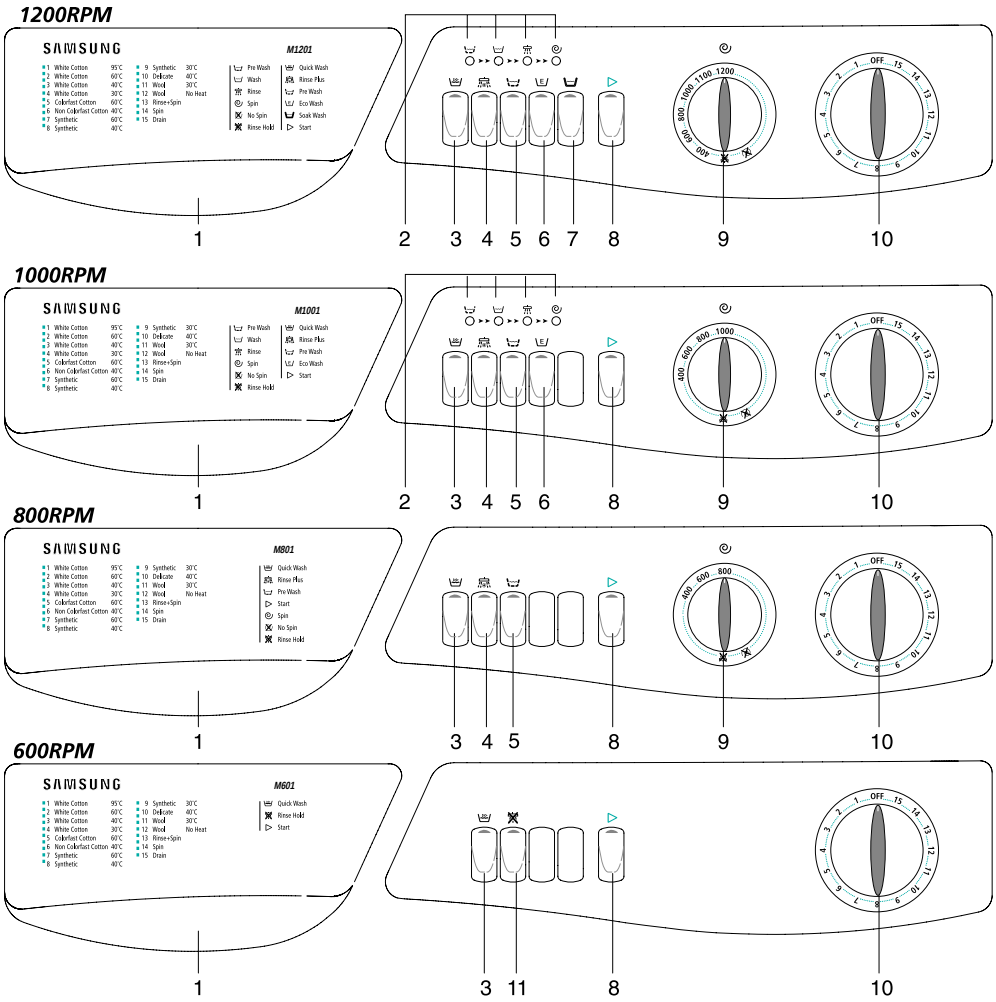

1. Detergent Dispen

2. Operating Pilot Li
The pilot lights come o
options selected.

3. Quick Wash Buttor
This option reduces was
Use this option for light
Recommended load amo
This function is not avai

4. Rinse Plus Button
Selecting this option ad
prolonged accordingly.
water, for baby clothes
This function is not ava

5. Prewash Button
Only select for washing
cycle which extends wa
with the wool program.

6. Eco Wash Button
Selecting this option in
reduces energy consum
The temperature is redu
95˚C→ 60˚C, 60˚C→ 4
The wash time will be s
For use when washing
available with the wool

7. Soak Wash Buttor
Select this option for h
minutes (the drum rotat
performs the desired wa
This function cannot be

Note : The Prewash, Qui
together: One automati

8.Start Button
This button can be used

9.Spin Speed Selecto
Turn the knob to select
M1201 : 1200, 1100, 1(
M1001 : 1000, 800, 60(
M801 : 800, 600, 400,

10. Program Selector Knob

Turn the knob to select the desired program. The program is shown as follows

CODE	PROGRAM	TEMP	CODE	PROGRAM	TEMP	CODE	PROGRAM	TEMP
1	White Cotton	95˚C	6	Non-Colorfast Cotton	40˚C	11	Wool	30˚C
2	White Cotton	60˚C	7	Synthetic	60˚C	12	Wool	-
3	White Cotton	40˚C	8	Synthetic	40˚C	13	Rinse+Spin	-
4	White Cotton	30˚C	9	Synthetic	30˚C	14	Spin	-
5	Colorfast Cotton	60˚C	10	Delicate	40˚C	15	Drain	-

11. Rinse Hold Button

The laundry remains lying in the water after the last rinse.
This function is suitable for delicate laundry and net curtains.
Before the laundry can be unloaded, the "Spin" or "Drain" program must be performed.

Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes. To do this:

1. Turn the Program Selector Knob to the "3" position.
2. Pour a little detergent into compartment in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the Start button.

- This will remove any water from the manufacturer's test run remaining in the machine.

Putting detergent in the washing machine

1. Pull out the detergent drawer.
2. Add laundry detergent into compartment .
3. Add softener into compartment ⑧ (if you desire).
4. Add prewash detergent into compartment ① (if you desire).

***Option Using Hot Water**

- The hot water valve is operated when you select a water temperature option above 60˚C (60˚C or 95˚C).

To add liquid detergent:

1. Remove the divider from its slot and insert it into compartment ⑪.